

## Maxi free-standing Beacons / Revolving Signal Light 884 Rotating Beacon Fresnel 24VAC/DC BU



Part No.: 884.530.75



MECHANICAL DATA	
Height	218 mm
Diameter	142 mm
Materials	PC PC/ABS
Dome colour	Blue
Housing colour	Black
Protection category	IP65
Connection	Screw terminals
cross-sectional area maximum	1,50mm² / 16AWG
Cable entry	Rubber pinch
Cable entry minimum	d = 5 mm
Cable entry maximum	d = 7 mm
Tension relief	Pull-out protection
Type of fixing	Base mounting
Working temperature minimum	-30°C
Working temperature maximum	+50°C
Weight with packaging	761 g
Product weight	672 g
ELECTRICAL DATA	
Operating voltage	24V
Operating voltage type	AC/DC
Operating voltage frequency	50Hz
Operating voltage tolerance	+/- 10%
Rated operational voltage	24 VDC

250 mA 2600 mA

3

Ш

LED

Blue

Revolving

60 U/min

50,000 h minimum

Protection class 2

## Optical signal image Service life optical Rotation speed (rpm)

Rated operational current

Rated inrush current Protection class

Overvoltage category

Pollution degree

**OPTICAL DATA** Light source

Light colour

ļ

For additional installation and mounting information, refer to the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.



## Maxi free-standing Beacons / Revolving Signal Light 884 Rotating Beacon Fresnel 24VAC/DC BU


Conforms with CE	Yes
Conforms with RoHS directive	Yes
WEEE	Yes
Conforms with ATEX-directive	No
Conforms with CCC-Ex	No
Conforms with CCC	No
Conforms with UL	No
Conforms with FCC	No
Conforms with IC	No
EAC certificate available	Yes
Conforms with UKCA (Importer)	Yes (WERMA (UK) Ltd.)
Conforms with CMIM	No
Conforms with AS-I	No
Conforms with DNV	No
Conforms with RoHS CN	No
Conforms with VdS	No

Provide the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.

ļ



Maxi free-standing Beacons / Revolving Signal Light 884 Rotating Beacon Fresnel 24VAC/DC BU

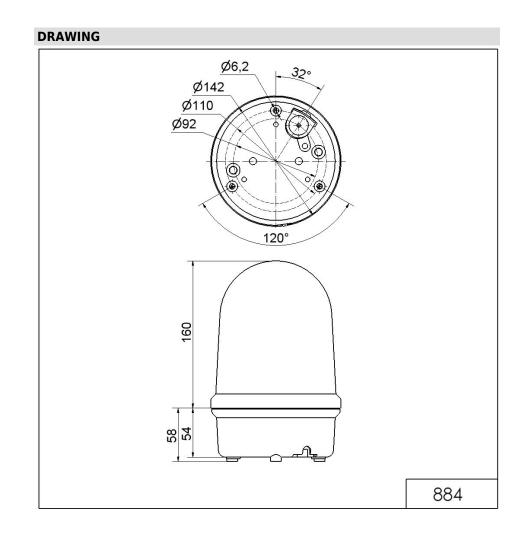

For additional installation and mounting information, refer to the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.